CDI 5400-XXX-DG Instructions

for pipes 3” and larger

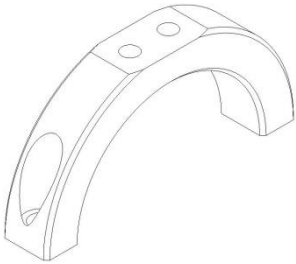

Caution:

- *Make sure the air pressure is bled down completely before drilling the holes.*
- *Wear safety glasses.*
- *Clamp the drill guide firmly in place.*

Drilling the holes to install the meter will release some metal shavings into the pipe. When planning the installation, make sure that all downstream equipment is protected by filters, or take other precautions to ensure that shavings do not reach critical equipment or get blown out in a way that could cause injury.

Shut off the supply of air to the pipe where the meter will be mounted and allow the pressure to bleed down.

Secure the drill guide to the pipe in the desired location using the back half ring and the bolts that came with the meter.

Drill the two holes (3/16” bit included) and remove any resulting burrs from the outside of the pipe. Make sure the outside surface of the pipe is clean and smooth before installing the meter.

© CDI Meters, Inc. 2022